

JVC

COLOUR TELEVISION *INSTRUCTIONS*



This illustration shows AV-14UMG7.

AV-21B17
AV-21BMG7
AV-21BMG7B
AV-21BMG7S

AV-14U17
AV-14UMG7
AV-14UMG7B

Contents

| | |
|-------------------------|---|
| Safety precautions..... | 2 |
| Connections | 3 |
| Initial settings..... | 3 |

| | |
|--|---|
| Remote control buttons and functions | 4 |
| TV buttons and functions..... | 4 |
| Using the TV's MENU..... | 5 |
| Presetting TV channels | 6 |
| Using the timer | 7 |
| Playing game..... | 7 |
| Sound and Colour system in your country or region | 7 |

| | |
|-----------------------|------------|
| Troubleshooting | Back cover |
| Specifications | Back cover |

PREPARATION

FUNCTIONS

REFERENCE

The illustrations of AV-14UMG7 is used in this instruction manual for explanation purpose. Your TV may not look exactly the same as illustrated.


GGT0130-001A-H

Thank you for buying this JVC colour television.
To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.


WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not allow objects or liquid into the cabinet openings.

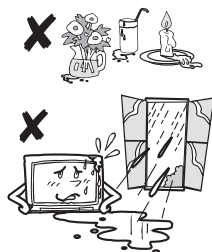

- Operate only from the power source indicated on the rear of the TV.
- Avoid damaging the power cord and mains plug. When unplugging the TV, grasp the mains plug. Do not pull on the power cord.
- This TV can be turned on/off power by connecting/disconnecting the AC plug into AC outlet. While this TV is being installed, enough space should be reserved for connection/disconnecting the AC plug into AC outlet by hand.

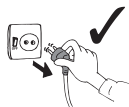


In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

CAUTION

TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS TV.


- Never block or cover the ventilation openings.
- Never install the TV where good ventilation is unattainable.
- When installing this TV, leave spaces for ventilation around the TV of more than the minimum distances as shown.

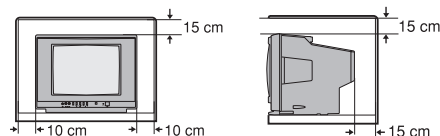

- The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.



- Insert two batteries by following the ⊕ and ⊖ polarities and inserting the ⊖ end first.
- Use AA/R6/UM-3 dry cell batteries.
- If the remote control does not work properly, fit new batteries. The supplied batteries are for testing, not regular use.

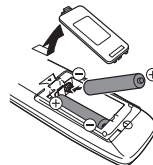


Connections

CAUTION

Ensure to turn off all equipments including the TV before connecting the AC mains plug to the AC outlet.


Connecting to the aerial cable and VCR

*This illustration shows AV-14UMG7.

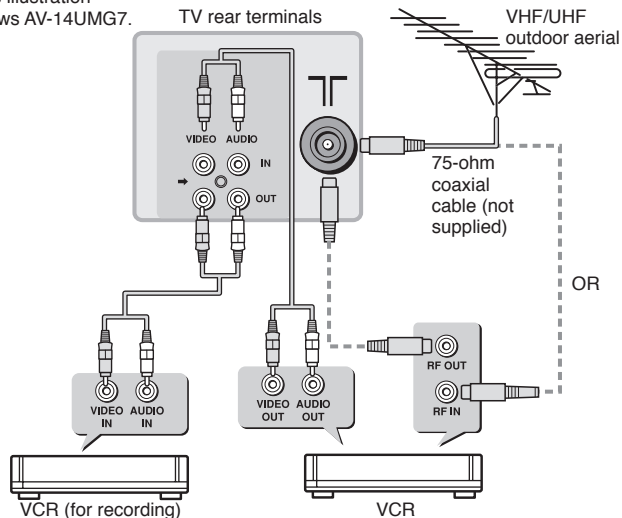

Connecting to the TV front terminals

*This illustration shows AV-14UMG7.

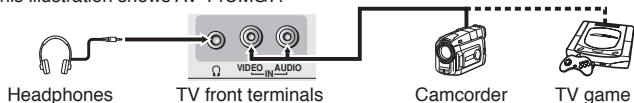

After all the connections have been made, insert the mains plug to the AC outlet.



Initial settings

1 Turn on the TV.

JVC



 
or wait 15 seconds to run Setup Tour

JVC logo appears.


2 Select a language.



Searching for the channels.

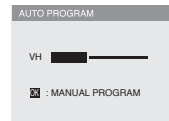

 to stop or wait until AUTO PROGRAM finishes

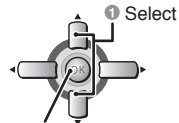


② Proceed to AUTO PROGRAM

Note

This Language Menu's on screen is used for explanation purpose only. Your TV may not show the same as this on screen.

 3 Search a channel manually or fine-tune a channel.

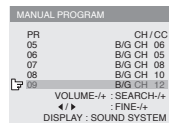

To perform manual search and fine-tune (FINE), ➡ page 6.




MENU or TV/VIDEO
To complete Setup Tour

To restart Setup Tour after above setup has completed



(while the cursor is pointing to PICTURE MODE and within 3 seconds)

If you press  when LANGUAGE is displayed (Step 2), the screen will exit to MENU.

Remote control buttons and functions

Select PICTURE MODE (➔ page 5)

RETURN PLUS function

Return to the frequently viewed channel.

Choose the channel you want to programme



Press and hold

To cancel



Press and hold

 
**RETURN PLUS
PROGRAMMED!**

**RETURN PLUS
CANCELED!**

RETURN function

If you have not set or have canceled the RETURN PLUS channel, this will return to the previously viewed channel.

Display the programme number or video terminal number.

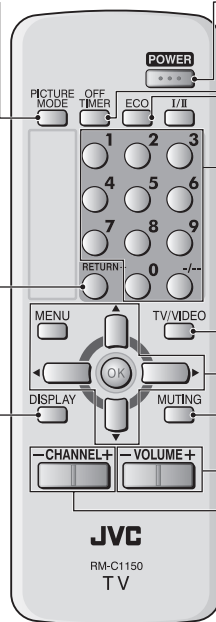


Turn the TV on from standby and vice versa

Set OFF TIMER (➔ page 7)

Select ECO MODE (➔ page 5)

 Select the programme number



For two digits programme number



Select TV or video input

Operating the menus (➔ page 5)

Turn the volume Off / On

Adjust the volume level, Turn off Muting

Select Channel

For Hyper Scan :




Press and hold

PR changes without changing the picture. Once you stop pressing CHANNEL+ or CHANNEL- button, picture will change to the desired PR.

TV buttons and functions

*This illustration shows AV-14UMG7.

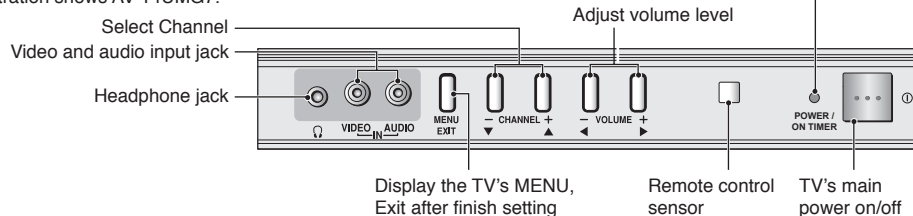 

POWER lamp - Indicates the TV's status.

No colour : TV's main power is being turned off.

 
Red : TV's main power is being turned on.

Blink : While the TV is in standby mode, ON TIMER function is in used. While the TV is in turn on mode, OFF TIMER function is in used.

Note: When you turn off the power switch while TV is in standby mode, the power lamp will go off in 5 -10 seconds. When you operate the TV, POWER Lamp will blink.

Using the TV's MENU

Operating the menus

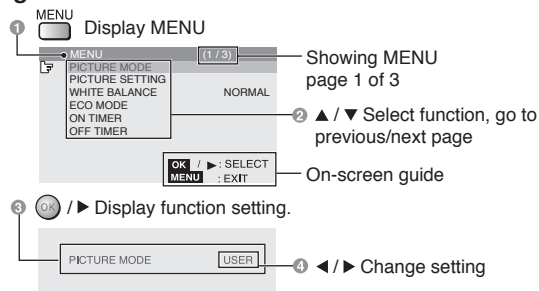

- To return to previous screen
- To exit from Menu or

| MENU | Item | Description (Setting / Adjustment) |
|--|-----------------------|--|
| PICTURE MODE | USER | Change picture settings (⇒ PICTURE SETTING) |
| | VIVID | Heightens contrast and sharpness |
| | SOFT | Softens contrast and sharpness |
| PICTURE SETTING ■ PICTURE SETTING can operate when PICTURE MODE is set to USER (⇒ PICTURE MODE) | CONTRAST | Adjust contrast (Lower ↔ Higher) |
| | BRIGHT | Adjust brightness (Darker ↔ Brighter) |
| | SHARP | Adjust sharpness (Softer ↔ Higher) |
| | COLOUR | Adjust colour (Lighter ↔ Deeper) |
| | TINT | Adjust colour tint (Reddish ↔ Greenish) |
| | RESET | Reset all items level to center |
| | On screen scale color | Center position : Yellow Other position : Green |
| WHITE BALANCE | NORMAL | Normal white balance |
| | COOL | Bluish white |
| | WARM | Reddish white |
| ECO MODE ■ Adjust picture contrast according to room brightness | OFF | Cancel the function |
| | ECO-1 | Mild contrast (recommended) |
| | ECO-2 | Even contrast |

| | | |
|--------------------------------------|---|--|
| ON TIMER | Turns on the TV from standby mode (⇒ page 7) | |
| OFF TIMER | Turns off the TV to standby mode (⇒ page 7) | |
| AI VOLUME | ON | Sets the volume level for all channels and video inputs automatically depends on the strength of signal from the source. |
| | OFF | Volume can be adjusted individually for each channel |
| CHILD LOCK | ON | Disable the front buttons of the TV |
| | OFF | Cancel the function |
| BLUE BACK | ON | Displays a blue screen and mutes the sound when signal from the aerial is weak or absent |
| | OFF | Cancel the function |
| VNR ■ To reduce the picture noise | AUTO | Effect of VNR is automatically controlled |
| | MIN | Effect of VNR becomes minimum |
| | MAX | Effect of VNR becomes maximum |
| | OFF | Cancel the function |
| GAME | Select a game to play (PUZZLE / TWINS) (⇒ page 7) | |
| LANGUAGE | Choose your desired on screen display language. | |
| AUTO PROGRAM | Automatically registers channels (⇒ page 6) | |
| MANUAL PROGRAM | Manually search channels and fine-tunes channels (⇒ page 6) | |
| INSERT / DELETE | Add, delete and move registered channels (⇒ page 6) | |
| COLOUR SYSTEM | Select the appropriate system | |
| | In TV mode : | |
| | (AV-14U17 / AV-21B17 : AUTO / PAL / SECAM) | |
| | (Other models : AUTO / PAL / SECAM / NTSC3.58 / NTSC4.43) | |
| SOUND SYSTEM | In VIDEO mode (All models) : | |
| | (AUTO / PAL / SECAM / NTSC3.58 / NTSC4.43) | |
| | (⇒ page 7) | |
| | Select the appropriate system | |
| | (AV-14U17 / AV-21B17 : BG / I / DK) | |
| | (Other models : BG / I / DK / M) (⇒ page 7) | |

Presetting TV channels

AUTO PROGRAM

- 1 ➡
- 2 or ➡
- 3 to stop or when AUTO PROGRAM finishes.
- 4 MANUAL PROGRAM screen appears (➡ MANUAL PROGRAM).

MANUAL PROGRAM

- 1 ➡
- 2 or ➡
- 3

| | |
|--|--|
| To search for a channel manually (SEARCH) | <ol style="list-style-type: none"> 1. Select the PR number you wish to store the channel. 2. Press the VOLUME +/- button to start searching from the present channel. Searching stops when the following channel is found. |
| To fine-tune a channel (FINE) | <ol style="list-style-type: none"> 1. Select the channel you wish to fine-tune. 2. Press the ◀ or ▶ button until a clear picture is obtained. |
| If noisy sound is heard and unsuitable sound system for your broadcasting (➡ page 7) | <ol style="list-style-type: none"> 1. Press DISPLAY button then on screen will change to Sound system. 2. Choose an appropriate sound system. |
- 4 to exit.

INSERT / DELETE

After this operation, other channel's PR number will be changed.

- 1 ➡
- 2 or ➡
- 3

| | |
|---------------------------------|---|
| To add the new channel (INSERT) | <ol style="list-style-type: none"> 1. Select the PR number you wish to store the new channel. 2. Press the VOLUME+ button. 3. Press ▶ button to choose "CH" or "CC". 4. Enter the CH/CC number for the channel you wish to add. The TV starts to search for the channel. Certain channels are not available in some countries. If you cannot receive a channel by INSERT, use MANUAL PROGRAM. |
| To delete a channel (DELETE) | Select the channel you wish to delete and press . |
| To change the PR number (MOVE) | <ol style="list-style-type: none"> 1. Select the PR number you wish to move. 2. Press the ▶ button. 3. Press ▲ or ▼ button to move it to the new PR number. 4. Press ◀ button. |
- 4 to exit.

Channel table




| CH/CC | CCIR | OIRT | CH/CC | CCIR | OIRT | CH/CC | CCIR | OIRT |
|-------|------|------|-------|------|------|-------|------|------|
| CH02 | E2 | R1 | CH21 | E21 | | CC01 | S-1 | |
| CH03 | E3 | | CH22 | E22 | | CC02 | S-2 | |
| CH04 | E4 | R2 | | | | | | |
| CH05 | E5 | R6 | | | | | | |
| CH06 | E6 | R7 | | | | | | |
| CH07 | E7 | R8 | | | | CC41 | S-41 | |
| CH08 | E8 | R9 | | | | CC75 | X | |
| CH09 | E9 | | | | | CC76 | Y | R3 |
| CH10 | E10 | R10 | | | | CC77 | Z | R4 |
| CH11 | E11 | R11 | | | | CC78 | Z+1 | R5 |
| CH12 | E12 | R12 | CH69 | E69 | | CC79 | Z+2 | |

CCIR : Middle East, Southeast Asia, etc..


 

OIRT : Russia etc..

Using the timer

ON TIMER

- 1 **MENU** ➔ **ON TIMER**
- 2  or  ➔ 
- 3 Choose the PR (channel) that you want to watch when the TV turns on. External input, AV position and any un-preset channel cannot be chosen for PR.
- 4 Set the ON TIMER to your desired period of time. When the ON TIMER is set to other than 00:00, the ON TIMER is activated. You can set the period of time to a maximum of 12 hours in 15-minute intervals.
- 5 To off the ON TIMER, set the time to 00:00.

OFF TIMER


- 1 **MENU** ➔ **OFF TIMER** ➔  ➔ 
- Note: You can select OFF TIMER function by direct key. 
- 2 You can set the period of time to a maximum of 120 minutes in 10 minutes intervals.
 - 3 When the remaining elapse time is one minute, "GOOD NIGHT!" appears on the screen.
 - 4 You can display the OFF TIMER screen again to confirm or change the remaining time.
 - 5 To off the OFF TIMER, select OFF or turn off the TV's main power.

Playing game


- 1 **MENU** ➔ **GAME**
- 2 Select a game.

| | |
|---------------|--|
| PUZZLE | This game needs you to rearrange the numbers 1 to 15 in order by swapping the blank card with the numbered card. |
| TWINS | This game needs you to find all the matching pairs of cards. If you open a correct pair, the card will stay uncovered. If you miss, they will flip back. |

 Instructions to play



OR

 

To open a card (TWINS only)

To restart the game

To exit the game

Sound and Colour system in your country or region

| Area | Country or Region | Sound System | Colour System |
|-------------------|---|--------------|---------------|
| Asia, Middle East | Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, etc. | B/G | PAL |
| | Indonesia, Malaysia, Singapore, Thailand, India, etc. | D/K | |
| | China, Vietnam, etc. | I | SECAM |
| | Hong Kong, etc. | B/G | |
| Europe | Islamic Republic of Iran, Lebanon, Saudi Arabia, etc. | M | NTSC |
| | Philippines, Taiwan, Myanmar, etc. | D/K | |
| | Russia, etc. | B/G | PAL |
| | Czech Republic, Poland, etc. | I | |
| Oceania | Germany, Holland, Belgium, etc. | B/G | PAL |
| | UK, etc. | I | |
| Africa | Australia, New Zealand, etc. | B/G | PAL |
| | Republic of South Africa, etc. | I | |
| | Nigeria, etc. | B/G | |
| | Egypt, Morocco, etc. | | SECAM |

Troubleshooting

If a problem occurs when you are using the TV, check the below troubleshooting guide before calling for repair.

| Problem | Cause / Solution |
|---|---|
| No or poor picture | <ul style="list-style-type: none"> • Turn OFF BLUE BACK if it is ON. (⇒ page 5) • Adjust the COLOUR or BRIGHT setting. Refer to "PICTURE SETTING". (⇒ page 5) • Choose the appropriate colour system. (⇒ page 5) |
| Snowy picture | <ul style="list-style-type: none"> • Check the aerial and TV connections. (⇒ page 3) |
| Stripes or coloured patches appeared | <ul style="list-style-type: none"> • Interference caused by electrical appliances or speakers. Move them away from the TV. |
| Double-picture (ghosting) | <ul style="list-style-type: none"> • Interference caused by signal reflecting from mountains or buildings. Adjust the aerial's direction or use another antenna. |
| No or poor sound | <ul style="list-style-type: none"> • Choose the appropriate sound system. (⇒ page 5) |
| White and bright still image looks as if it is coloured | <ul style="list-style-type: none"> • Inevitable phenomenon due to the nature of the picture tube. This is not a malfunction. |
| Image from video input is distorted | <ul style="list-style-type: none"> • The image was not properly recorded. This is not a malfunction. |
| Cannot operate the remote control | <ul style="list-style-type: none"> • Replace the batteries. (⇒ page 2) • Operate it at less than 7 meters from the TV. |
| Cannot operate the MENU | <ul style="list-style-type: none"> • Exit and enter the MENU again. |
| Cannot operate the front panel buttons | <ul style="list-style-type: none"> • Turn OFF CHILD LOCK if it is ON. |
| Image takes a while to be displayed | <ul style="list-style-type: none"> • Image requires time to stabilize before display. This is not a malfunction. |
| TV emits crackling sound | <ul style="list-style-type: none"> • Caused by a sudden change in temperature and it is not a malfunction. Call a service technician for inspection. |
| Static shock when touch the TV screen | <ul style="list-style-type: none"> • Caused by static electricity of the picture tube and it will not harm the human body. This is not a malfunction. |

Specifications

| | |
|--------------------------------|---|
| TV RF systems | AV-14U17 / AV-21B17 : B, G, I, D, K Others models : B, G, I, D, K, M |
| Colour systems | AV-14U17 / AV-21B17 : PAL, SECAM, NTSC 3.58 MHz / NTSC 4.43 MHz (in VIDEO mode only) Others models : PAL, SECAM, NTSC 3.58 MHz / NTSC 4.43 MHz |
| Receiving channels | VHF low channel (VL), VHF high channel (VH), UHF channel (U) Receives cable channels in mid band, super band and hyper band. |
| Power requirements | |
| For Malaysia | AC 160 to 240 V, 50 Hz / 60 Hz |
| For others | AC 110 to 240 V, 50 Hz / 60 Hz |
| External input / output | |
| INPUT | VIDEO input, AUDIO input |
| OUTPUT | VIDEO output, AUDIO output |
| Headphone jack | Stereo mini jack (3.5 mm diameter) |

Design and specifications are subject to change without notice.

JVC